


Please check dust covers at the joints of your steering & suspension parts occasionally.

Function of dust cover

- The dust cover protects the joint part from water and dust.
- It also keeps the grease inside for the grease-up type joint.
- **Dust covers for Grease-in type joint has a slit to eject old (odd) grease when filling up the new grease.

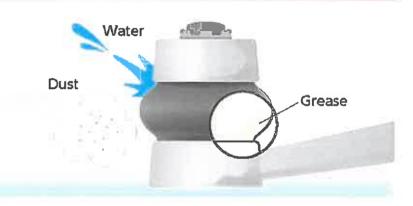

If you find a dust cover torn, replace the whole product immediately!



- If the dust cover is broken, the ball stud is getting rusty and worn out.

 It is getting loose and might be coming out in the worst case.
- Loose joint causes unstable steering, extraordinary noise and more serious troubles, if the ball stud falls out.

SANKEI INDUSTRY CO.,LTD.JAPAN

STEERING & SUSPENSION PARTS



655) uses high-quality dust covers

Our dust covers pass the severe tests for your safety driving!

Temperature Resistance

- It is conducted long running tests in the air between -40°C and+100°C.
- It performs well in a long run.

Grease Resistance

- It is placed in the container filled with grease for a long time.
- It stands still in a good condition for many years.

Weather Resistance

- It is kept in the artificial ozonized air.
- It maintains the rubber quality in the normal weather for more than 10 years.











Only the durable dust covers passed the severe tests are used for the top quality 656 Steering & Suspension Parts.

